


www.dewesoft.com - Copyright © 2000 - 2021 Dewesoft d.o.o., all rights reserved.

# GPS measurement and recording - GNSS

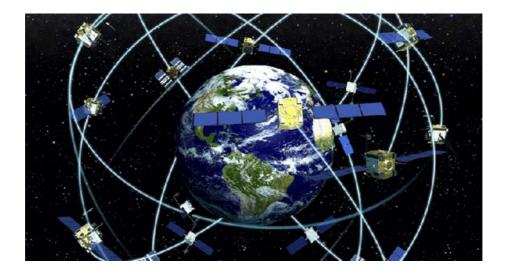

### Introduction to GNSS systems

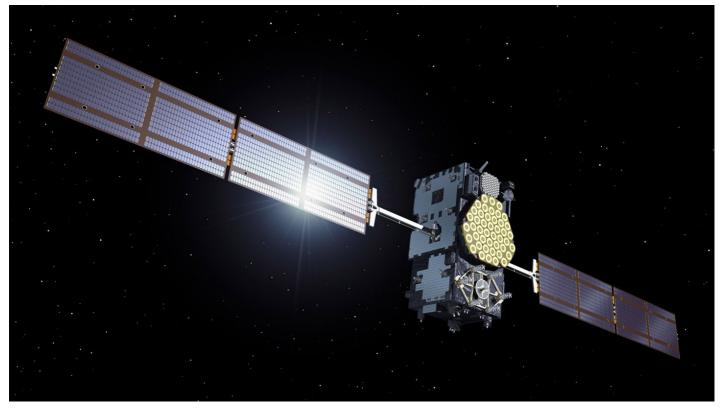


Image 1: Galileo GNSS satellite

**Global Navigation Satellite System (GNSS)** is a space based system of satellites that provide location (longitude, latitude, altitude) and time information in all weather conditions, anywhere on or near the Earth where there is an unobstructed line of sight to four or more GNSS satellites.

Currently two GNSS systems have global coverage:

- **GPS** (Global Positioning System) is made by US and consists of at least 24 operational satellites around the Earth. It is currently the world's most utilized satellite navigation system.
- **GLONASS** (Globalnaya Navigatsionnaya Sputnikovaya Sistema) is the Russian navigation system which consists of 31 satellites (24 operational).

Additional two global navigation systems are currently in construction:

- **BeiDou Navigation Satellite System** is Chinese GNSS system, which currently consists of 22 operational satellites in orbit. The system can already be used for positioning in Asia-Pacific region. Global operational capability with 35 satellites is expected in 2020.
- **Galileo** is European GNSS. Currently there are 18 satellites in orbit. It is expected to be in full operational capability by the year 2020.

### GPS basics

[Video available in the online version]

### How positioning is achieved?

**True range multilateration** or **trilateration** is the basic concept behind GNSS position calculation. GNSS Satellites are sending signals which contain a fast periodic synchronization code and a slow navigation message. The synchronization code is used to determine the time it took for the signal to reach the receiver. The navigation message contains information about satellite position in space, satellite time, satellite system health and information about GNSS satellites around it. Signals from at least four satellites are needed for the receiver to calculate it's position. Normally more than four satellites are used to determine the position.

## 2D concept

It is easier to picture the concept of trilateration in two dimensions. GNSS receiver calculates it's distance to the satellite from the *delay in signal reception*. Satellite position at the time of transmission is known (calculated from the data provided in the slower navigation message). The receiver can be anywhere on the circle around the satellite.

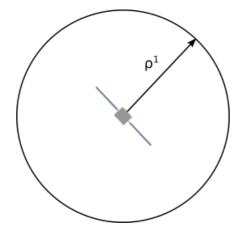


Image 2: Possible receiver positions are on the circle around the satellite

If another satellite with known position and distance from the receiver is added then there are *two possible positions* where the receiver could be.

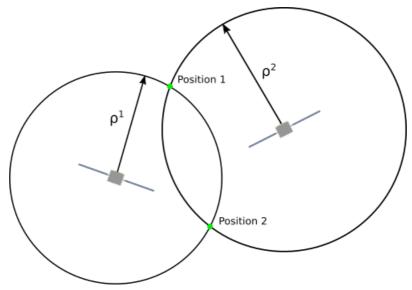


Image 3: Receiver can lie on one of the intersections

This would be enough to place the receiver in 2D space, but to exactly determine the position we would need a third satellite. However in the real world navigation two possible positions are enough. The reason why is because one of the positions is normally in space or deep below the surface of the Earth.

Third satellite in 2D has to be added to eliminate the **receiver clock error**. There are a number of errors in the range measurement and this is one of the largest errors that can be eliminated. When a receiver gets a signal it determines it's delay from the difference between the time of signal transmission and signal reception. This delay is determined by the receiver clock which is normally not as precise as satellite clocks. Even though the receiver clock is synchronized to the GNSS time frequently during it's operation, small timing errors between the receiver and GNSS clock do occur.

Distances from delays are calculated from the speed of light (299 792 458 m/s), so even *small timing errors can cause large positioning errors* (an error of 1 millisecond causes a position error of 300 km). However this error can be eliminated with the use of an additional satellite, because the receiver clock error is equal for each signal that was received at approximately the same time.

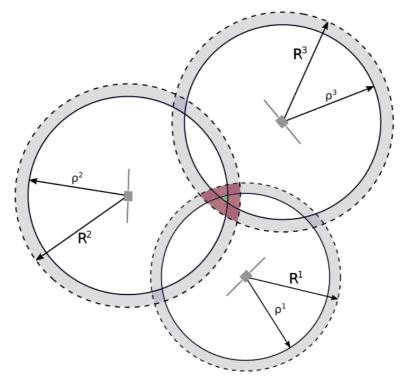


Image 4: Positioning with three satellites, possible positions with receiver clock error (red), possible positions without the receiver clock error (green)

### 3D concept

In 2D two satellites were needed to determine the receiver position and an additional satellite was needed to correct the receiver clock error. To determine a position in 3D space we need an additional satellite.

If the distance to one satellite is known from the signal delay the receiver could be located *anywhere on the sphere* around the satellite with the *radius of the calculated distance*.

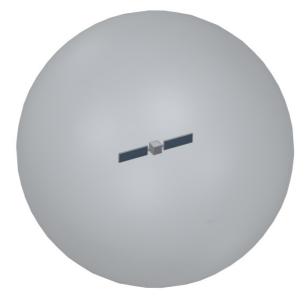


Image 5: Possible receiver positions lie on the sphere around a satellite

If two satellites are used the receiver could lie anywhere on the circle that is formed by the intersection of two spheres.

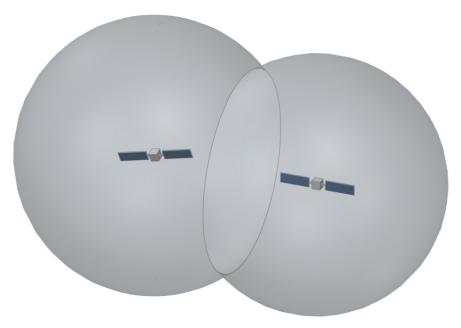


Image 6: Intersection between two spheres forms a circle

With the addition of a third satellite the receiver could be in one of the points.

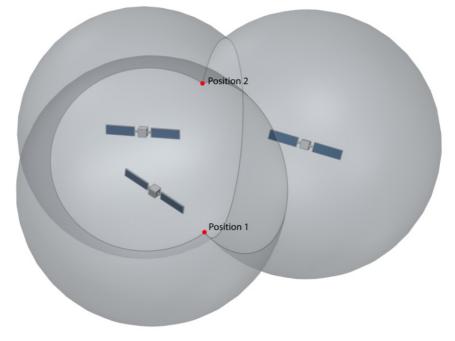


Image 7: Two possible positions

As was said earlier two possible positions are enough to determine the receiver position in 3D space. For example, if **Position 1** from the upper picture lies somewhere on the Earth surface **Position 2** is somewhere in space and has higher altitude than GNSS satellites. However the *fourth satellite* has to be used to correct the **receiver clock error**.

#### How positioning is calculated?

Each receiver measures *the range between itself and the transmitting satellite*. The measured range from signal delay isn't exact and contains some errors. This range is called a **pseudorange**. With different corrections these pseudoranges come closer to the exact range and can be used to calculate an accurate receiver position.

$$R^{j} = \rho^{j} + c(\delta t_{rec} - \delta t^{j}_{sat}) + T^{j} + \hat{\alpha}I^{j} + TGD^{j} + M^{j} + \epsilon^{j}$$

| $R^{j}$ - pseudorange between the GNSS receiver and the satellite at the time of transmission, calculated from signal | delay |
|---|-------|
| $p^j$ - distance between the GNSS receiver and the satellite at the time of transmission                              |       |
| c - speed of light (299 792 458 m/s)  |       |
| $\delta t_{rec}$ - receiver clock error   |       |
| $dt^j_{sat}$ - satellite clock error  |       |
| $T^j$ - signal tropospheric delay   |       |
| $lpha I^j$ - signal ionospheric delay   |       |
| $TGD^{j}$ - instrumental delay  |       |
| $M^j$ - multipath errors  |       |
| <i>j</i> - receiver measurement noise   |       |

#### Navigation equations

Each pseudorange is a sum of the true distance to the satellite which is unknown and has different errors. True distance can be written as a distance between the unknown receiver coordinates and satellite coordinates.

$$ho^{j} = \sqrt{(x_{rec} - x_{sat}^{j})^{2} + (y_{rec} - y_{sat}^{j})^{2} + (z_{rec} - z_{sat}^{j})^{2}}$$

 $x_{rec}, \,\, y_{rec}, \,\, z_{rec}$  - unknown receiver coordinates  $x_{sat}^j, \,\, y_{sat}^j, \,\, z_{sat}^j$  - known satellite coordinates

All of the errors except the receiver clock error depend on the satellite position with respect to the receiver position at the time of transmission. They are normally corrected with some models.

$$D^{j} = -c\delta t^{j}_{sat} + T^{j} + \hat{lpha} I^{j} + TGD^{j} + M^{j} + \epsilon^{j}$$

Pseudorange can than be written with the previous terms.

$$R^{j} = \sqrt{(x_{rec} - x_{sat}^{j})^{2} + (y_{rec} - y_{sat}^{j})^{2} + (z_{rec} - z_{sat}^{j})^{2}} + c \delta t_{rec} + D^{j}$$

The  $D^j$  term is solved with error models and can be considered as a known term. We can transfer it to the left side.

$$R^{j}-D^{j}=\sqrt{(x_{rec}-x_{sat}^{j})^{2}+(y_{rec}-y_{sat}^{j})^{2}+(z_{rec}-z_{sat}^{j})^{2}}+c\delta t_{rec}$$

There are now four variables in range equations that are unknown, the receiver coordinates  $x_{rec}$ ,  $y_{rec}$ ,  $z_{rec}$  and the receiver clock error  $\delta t_{rec}$ . Therefore at least four pseudorange measurements from different satellites are needed to get a solution to

these variables (a system of four equations with four variables).

Normally *more than four satellites are used to obtain the solution*. The solution is a best fit to the over-determined (more equations than the unknown variables) navigation equation system.

# How GNSS signal is structured?

GNSS satellites transmit two or more radio signals. Each signal has it's exact **carrier frequency** which carries two signals, a *faster ranging code signal* and *slower navigation data signal*. These two signals are multiplexed on the carrier signal. Both signals are modulated on to the carrier by a binary phase shift keying (BPSK) - binary 1 has a different carrier signal phase than binary 0.

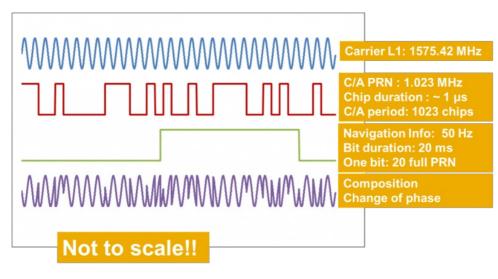


Image 8: Structure of the GPS L1 signal

- Carrier signal is an electromagnetic signal at a given frequency that is in radio frequency range.
- **Ranging code** is a sequence of 0s and 1s (zeroes and ones), which allow the receiver to determine the travel time of radio signal from satellite to receiver. Ranging codes are called Pseudo-Random Noise (PRN) sequences or PRN codes .
- **Navigation data** is a binary-coded message that provides information on the satellite position (ephemeris), clock bias parameters, positions of other satellites in constellation (almanac), satellite health status, and other complementary information.

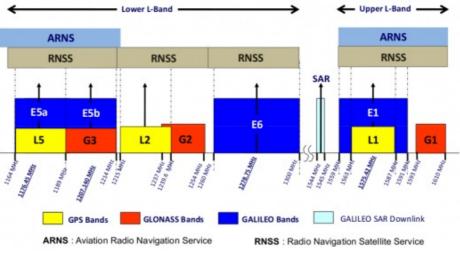


Image 9: Frequency bands of different GNSS systems

Current GNSS systems transmit multiple radio signals. This signals differ in their *frequency band* and *signal structure*. All of the signals can be used for ranging but some don't provide any navigational data. They are used as an additional signal mostly to reduce the error that is caused by ionospheric delays.

Most GNSS systems also transmit signals that can only be used by authorized users (military, government operations...).

### What is pseudorange measurement?

**Pseudorange** is determined by a *delay between signal transmission and signal reception*. This delay can be measured either with the use of the ranging code or the carrier signal.

# Code based positioning

Ranging code is a binary pseudo-random sequence that is periodically transmitted by each satellite. In the case of the GPS L1 signal this pseudo-random code is repeated every millisecond. The GNSS receiver runs the same exact pseudo-random code as the one transmitted by the satellite. Receiver compares it's internal code with the received satellite code. Due to the distance between the satellite and the receiver both codes aren't aligned. Receiver determines the time a signal needed to reach the receiver by delaying it's own pseudo-random sequence until it is aligned with the received sequence.

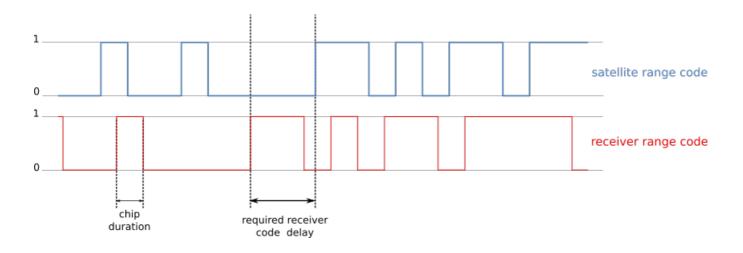


Image 10: Received satellite range code and identical receiver range code

Binary pseudo-random sequences are composed of **chips**. They are similar to bits except they *don't contain any data*. Sequences of chips are especially picked so it can be easily determined if they are aligned or not. The L1 GPS signal chip duration is around 1 microsecond, if receiver sequence misalignment is equal to 1 chip the range error is around 300 meters. The misalignment of precise GNSS receivers is around 1 to 2 percent of the chip duration, which equals to a ranging error between 3 to 6 meters.

### Carrier based positioning

Carrier based positioning uses a **carrier signal wave** to determine the range. The wavelength of carrier signals is significantly shorter than the chip duration of ranging codes.

For example GPS L1 range code frequency is 1.023 MHz with the chip duration of around 1 millisecond which brings us to the accuracy of 3 to 6 meters with precise receivers. The carrier frequency of the GPS L1 radio signal is 1575.42 MHz (around 1500 times higher) the wavelength of the carrier signal is approximately 19 centimeters. If an exact number of wavelengths and the phase of the signal was known the positioning accuracy in the range of millimeters could be achieved. However due to the periodicity of the signal (sinusoidal signal with phase changes) the comparison of the internal predicted signal with the received signal yields the same solution for each signal cycle (signal ambiguity). Another unknown term is the signal phase at

the time of transmission from the satellite.

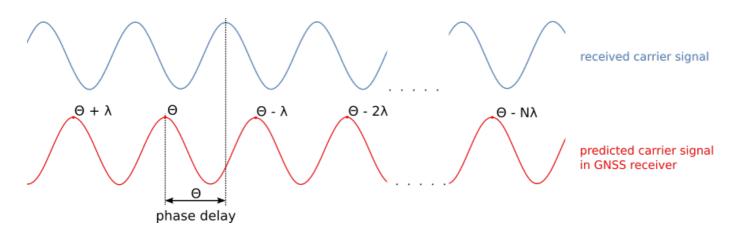


Image 11: Periodic carrier signal - phase delay can be misaligned for a number of wavelengths (ambiguity)

Carrier based positioning can be achieved with Real Time Kinematics technique (RTK) or with Precise Point Positioning techniques (PPP). Both techniques combine code and carrier based positioning principles. Carrier phase or frequency tracking are also sometimes used to correct or smooth the code-based pseudorange measurements.

## How GNSS navigation message is transmitted?

GNSS navigation message is transmitted *by the same signal as the ranging code* but at a *slower rate*. For example the GPS Navigation message is modulated alongside ranging codes at a rate of 50 bit/s and it is divided in to 5 sub-frames where each is 300 bits long. Therefore it takes 30 seconds to receive the whole navigation message.

In general navigation, messages provide *clock, satellite position, satellite telemetry* and *information on satellites in the constellation*.

| GPS navigation message |   |
|------------------------|---|
| Sub-frame number       | Description                             |
| 1                      | Telemetry and handover words            |
|                        | Satellite clock, GNSS time relationship |
| 2 and 3                | Telemetry and handover words            |
|                        | Ephemeris (precise satellite orbit)     |
| 4 and 5                | Telemetry and handover words            |
| 4 and 5                | Almanac component                       |

#### • Telemetry and handover words

This part contains *satellite status, indication on it's health* and *satellite time*. Receiver uses this part of the message to synchronize it's time with GPS time and determines if it is going to use the signal from the transmitting satellite.

#### • Satellite clock - GPS time reference

Contains information on *GPS time* (number of weeks since a specified date and number of 1.5 seconds since start of the week) and a relationship between GPS time and satellite time (for satellite clock error corrections).

#### • Ephemeris

It gives precise information on *satellite orbit shape and orientation, satellite velocity* and *position at a specified time*. Receiver uses this data to calculate satellite position at the time of transmission. Because position accuracy depends on the accuracy of ephemerides they are updated once every 2 hours (GNSS). Ephemeris have a certain time of validity and cannot be used if they are older.

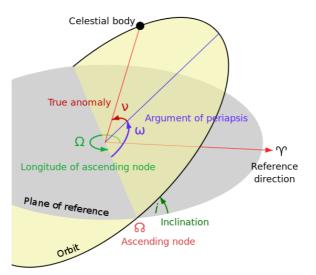


Image 12: Ephemeris - orbit orientation parameters and orbiting body position

#### • Almanac

Contains coarse orbits of all the satellites in constellation and data for ionospheric delay corrections. Coarse orbits of other satellites in constellation assist the receiver with the search of satellites in view. With newer receivers this feature is not as important as it was. Ionospheric delay data is used to correct ionospheric delays by receivers that can only receive one GNSS frequency.

Due to the amount of data 25 navigation messages are needed to transfer the whole almanac. With 30 seconds per message it takes 12.5 minutes to transfer the whole almanac.

# Time to first fix - TTFF

**Time to first fix** is the *time required by the receiver to perform the first position fix after it was switched on*. Normally there are three different TTFF scenarios:

- **Cold Start**: no data is stored in the receiver. The position solution is calculated with a f *ull sky search of satellites without almanac data*. For the first position fix satellite clock correction, GNSS time reference and ephemeris from at least 4 satellites are needed. Cold start time to first fix directly depends on the rate of navigation message transmission. In good GNSS signal environments (open view of satellites) cold start TTFF can be as low as 30 s but it could take significantly longer if satellite reception is poor or interrupted. Cold start TTFF can be significantly reduced with the use of assisted GNSS techniques where satellite navigation data is received through a network with a higher bandwidth than the satellite signal. This is frequently used in cell phones where navigation message and initial location is received through a mobile network or WLAN.
- Warm Start: the GNSS receiver has *valid ephemeris* and *clock correction data*, it only needs to retrieve the GNSS time reference from the navigation message to obtain a fix.
- Hot Start: GNSS receiver has valid ephemeris, clock correction and GNSS time reference. In addition accurate position in clock error are known. Position calculation is performed without any information from the navigation message.

### What causes a GNSS error?

#### Satellite clocks

The nature of GNSS measurements requires accurate absolute time measurement by each satellite. An error of 10 nanoseconds in satellite time measurement gives an error of 3 meters in pseudorange to that satellite. Despite the use of an accurate atomic clocks on satellites the measured time tends to drift and has to be monitored by more accurate atomic clocks in ground control stations. Clock correction model on satellites is periodically updated and is used in position calculations. Satellite clock errors still cause a mean error of  $\hat{A}\pm 2$  meters in range measurements (GPS). This errors can be further reduced with more accurate measurements and clock modeling or with differential GNSS techniques.

#### • Ephemeris errors

Ground control stations measure satellite orbits in constellation and calculate their change in the near future. Satellite orbit parameters are frequently updated (2 hours GPS) and have limited period of validity (4 hours GPS). Orbits changes due to effects of gravity can be accurately predicted. The variability in solar radiation pressure causes most of the errors. Ephemeris errors cause a mean error of ±2.5 meters in range measurements (GPS). Those errors can be eliminated with the use of differential GNSS techniques.

#### • Ionospheric delays

lonosphere is a layer of atmosphere that starts at 60 km above the Earth surface and extends to an altitude of 2000 km. It contains a partially ionized medium caused by Sun's ionizing radiation in UV and X spectrum and presence of charged particles. The propagation speed of GNSS electromagnetic signals depends on the ionosphere electron density. During the day the electron density rises due to Sun's radiation and during the night free electrons recombine with ions to produce natural particles reducing the electron density. Microwave GNSS signals are delayed in the ionosphere. This delay is proportionate to electron density and signal frequency.

The mean range error because of ionospheric delays is  $\hat{A}\pm 5$  meters but can be more during the periods of high ionospheric activity. Ionospheric delays can be mitigated with different techniques:

- **Dual frequency receivers:** receiver compares measurements from two signals with different frequencies transmitted by the same satellite. Because ionospheric delay is proportionate to signal frequency, range error can be calculated and removed from position calculation.
- **Differential GNSS techniques:** a fixed point base station measures the delay caused by ionospheric errors and transmits this data onto a communication network. Receivers with differential capability can use this data to remove ionospheric errors. The differential solution accuracy is proportional to the distance between the base station and the receiver because of the differences in ionospheric conditions.
- **Ionosphere modelling:** mathematical models of ionospheric delays are used to mitigate the error. This models range from simpler empirical models to complex numeric simulations of ionosphere. Single frequency receivers with ionosphere error modelling capability normally calculate delays with simpler empirical models. Model coefficients have to be updated regularly because of the variability of ionosphere conditions. Coefficients are normally obtained from some sort of GNSS augmentation system.

#### • Troposphere delays

Troposphere is a layer of atmosphere closest to the Earth. Air humidity, atmospheric pressure and air temperature effect the propagation speed of GNSS signals. Delays due to humidity are similar to ionospheric delays but are harder to mitigate. Because the effects of humidity are more local, can change rapidly and are not proportionate to signal frequencies. They can only be mitigated with differential GNSS techniques. By contrast the effects of atmospheric pressure and air temperature can be effectively mathematically modeled. GPS troposphere delays without augmentation cause a mean error of ±0.5 meters in range measurements.

#### Multipath errors

Multipath errors are caused by multipath interference and non-line-of-sight reception of satellite signals. Multipath interference occurs when signal is received from multiple paths due to reflections from surrounding environment. This interference distorts the shape of pseudorandom code which, causes an error in range measurements. The none-line-of-

sight reception occurs when there is no direct view of the satellite and only the reflection of the signal is received. Multipath errors are mitigated with algorithms inside the receiver, with different antenna designs that block or aren't that sensitive to reflected signals. None line of sight error can be solved with the use of multiple antennas, special antennas that measure the angle at which the signal was received, cameras that film the detect objects in the environment that could produce non line of sight errors.

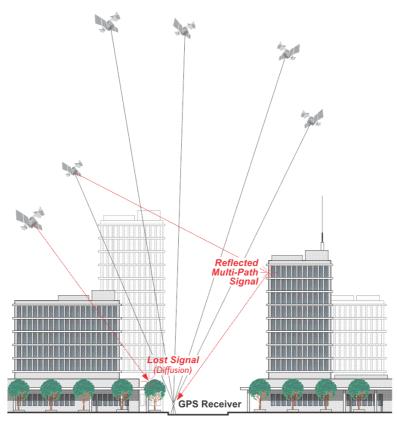


Image 13: Multipath interference causes an error in range measurement.


#### • Instrumental delays

These delays are caused by instrument circuitry, cables, antennas and internal filters used in receivers and satellites. While receiver instrumental delays are resolved in receiver clock calculation, satellite instrumental delays can be corrected with additional data or with the use of dual frequency receivers. Dual frequency receivers calculate the delay from the difference in range measurements on both signals. Single frequency receivers use a total satellite group delay that is sent with the navigation message to reduce the error. Satellite instrumental delay has impact on both code based and carrier based measurements and is proportional to satellite signal frequency.

• [Video available in the online version]

### What are the GNSS Augmentation systems?

All **GNSS Augmentation systems** provide additional data to GNSS receivers either to improve GNSS solution accuracy or to increase it's integrity.

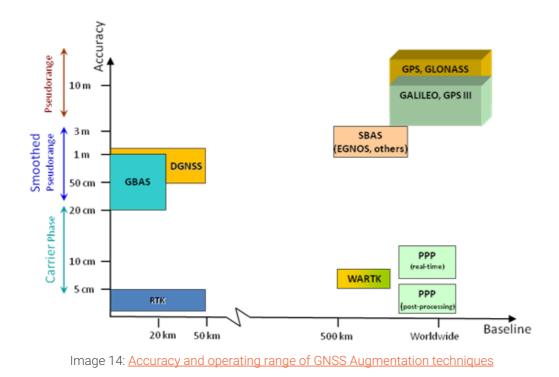

## SBAS - Satellite-based Augmentation Systems

SBAS are civil aviation safety-critical systems that support **wide area augmentation**. This systems consist of *ground stations* and *geostationary satellites*. The ground station infrastructure compute the integrity of GNSS constellations, correction data and SBAS satellite ranges. This data forms the SBAS signal in space, which is transmitted by SBAS geostationary satellites. Receivers that support SBAS use this signal to:

- compute the range to the SBAS satellites increasing the number of used satellites,
- reduce the amount of ionospheric error through the ionospheric model coefficients, which are provided in the SBAS message,
- reduce the amount of GNSS constellation clock errors with SBAS clock corrections,
- calculate the integrity of GNSS solution.

| Operational SBAS systems | Under implementation SBAS systems | Other SBAS that are under feasibility studies |
|--------------------------|-----------------------------------|---|
| WAAS - North America     | GAGAN - India                     | SACCSA - Central and South America            |
| EGNOS - Europe           | SDCM - Russia                     | SBAS Africa                                   |
| MSAS - Japan             | SNAS - China                      | SBAS Malaysia                                 |

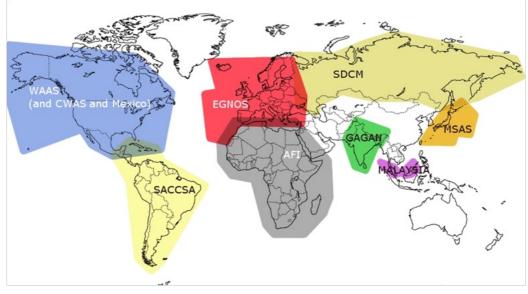


Image 15: Operational, in development and planned SBAS systems in the world

Primary purpose of the SBAS system is to increase the integrity of GNSS systems. However with the additional data the position accuracy is increased to 1 m (1 sigma). WAAS and EGNOS are certified to be used for horizontal and vertical guidance during different operations including landing approaches.

### GBAS - Ground-based augmentation system

GBAS purpose is to provide integrity and safety to GNSS service for **aviation** during approach, landing, departure phases of flight as well as surface operations. GBAS purpose is similar to SBAS the only difference is that *GBAS provides only local corrections*. It normally consists of two or more fixed GNSS receivers which compute correction data and integrity of GNSS service. The differential data, integrity parameters and final approach segment data is transmitted through very high frequency broadcast. This data can be used by any aircraft in the range of coverage. GBAS increases the accuracy of GNSS position to 1 m (1 sigma).

[Video available in the online version]

### DGNSS - Differential GNSS

**Differential GNSS techniques** use a network of fixed reference stations - *base stations* that remove satellite clock bias error, ionospheric delays and tropospheric delays. This data is then transmitted on to a network and used by receivers - *rovers* to improve their position accuracy. However differential techniques can not remove the errors that are caused by multipath or receiver noise. DGNSS networks don't offer integrity assurance as is the case with SBAS or GBAS. It is important to know that *differential techniques depend on the accuracy of the fixed base station coordinates*.

The **standard differential technique DGNSS** determines the errors from code based pseudorange measurements *at fixed reference stations*. Differential technique takes advantage of small differences in errors if the rover is close to the base station. The position accuracy of DGNSS is normally 1 m (1 sigma) but degrades at a rate about 0.5 m for every 100 km of distance away from the base station. Differential data is normally transmitted on radio frequencies or through the mobile network. Due to the slow changes in errors the correction data doesn't need to be updated in real time. DGNSS networks can be either wider

area or set up locally with DGNSS receiver that supports base station mode and a data link to transmit differential corrections.

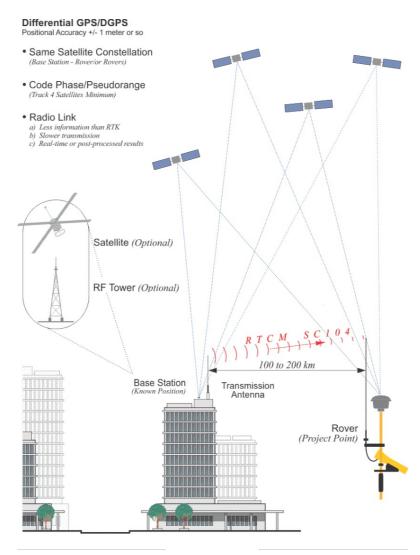


Image 16: Differential GNSS setup

# RTK - Real Time Kinematics

Real time kinematic **is an accurate GNSS differential technique** that uses carrier phase tracking to achieve high positioning performance (1 cm accuracy) close to the base station. RTK requires a *base station* and a *rover* with code range measurement, carrier phase tracking capabilities and a *real time data link*. The data link is used to transmit base station coordinates, code range and carrier phase measurements to the rover in real time (radio transmission or mobile phone network). Rover resolves carrier phase ambiguity with minimization of differences in base station to rover ranges measured with different satellites. The nature of this calculations also *fully removes satellite clock delays*. This is only possible if measurements on the base station and on the rover are done at approximately the same time. The initial ambiguity resolution takes around 10 seconds in modern dual frequency receivers with a clear open sky but could take more depending on the conditions (satellite visibility, multipath, receiver type...).

Due to the nature and accuracy of RTK solution there are certain requirements that have to be met to acquire and maintain the RTK fix solution:

• only satellites that are visible to both the base station and the rover can be used in RTK calculation, RTK receivers normally require at least 5 common satellites,

- signal obstructions that cause multipath or cause loss of satellite visibility can cause a loss of RTK fix and also partial or even full recalculation of cycle ambiguity,
- RTK solution is valid only in the range of 15-20 km around the base station, but can be increased to the maximum of 80 km with the use of a network of RTK base stations NRTK.

#### [Video available in the online version]

RTK technique can also be used for *accurate relative positions* with the use of a *movable base station*. The absolute accuracy of this system is as good as is the solution of the moving base station. However centimeter accuracy between the base station and the rover is achievable. Movable base techniques are used in **ADAS (Advanced Drivers Assistance)** tests where relative position between two vehicles has to be measured.

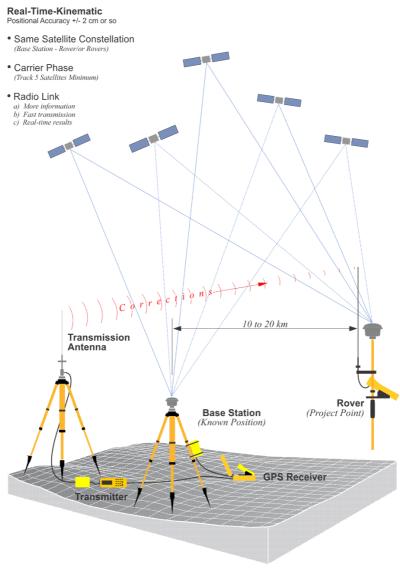


Image 17: Real Time Kinematics setup

### WARTK - Wide Area Real Time Kinematics

Wide Area Real Time Kinematics is a relatively new technology that *will enable RTK position accuracy for distances of up to 500 km around the WARTK base stations*. This could be accomplished with a combination of RTK correction data and accurate ionospheric data. Currently there are no WARTK systems in operation yet.

## PPP - Precise Point Positioning

Precise Point Positioning method enables *centimeter level accuracy without the use of a nearby base station*. This is achieved with precise satellite clock and ephemeris information in real time (satellite downlink, mobile network). PPP receivers have to be capable of dual frequency ranging and carrier phase tracking. Ionospheric error is compensated with dual frequency measurements. With additional processing the PPP algorithm also compensates tropospheric errors, and estimates the carrier phase ambiguity and can achieve centimeter level position accuracy. Currently the initialization period to centimeter accuracy takes quite longer (in the order of tens of minutes) than it does with RTK. However PPP techniques for real time applications are still in development. With shorter initialization times PPP could be a cheaper alternative to RTK which requires a base station in relative vicinity.

PPP techniques are for now mostly used for GNSS data post processing.

## GNSS hardware options with DEWEsoft

Dewesoft offers several different GNSS devices for different uses and accuracy requirements. The flexibility of <u>Dewesoft X</u> software also enables the use of 3rd party GNSS devices.

# Dewesoft GNSS devices

You can check all Dewesoft navigational instruments with GNSS receivers on navigational instruments webpage.

#### • DS-VGPS-HS and DS-VGPS-HSC

- Multi purpose GNSS device with 20/100 Hz GNSS receiver,
- RTK option available (2 cm positioning accuracy, both base and rover modes are supported, dual frequency GPS L1, L2 and GLONASS L1, L2 supported),
- interfaces: USB, RS232 (DS-VGPS-HS) and CAN output (DS-VGPS-HSC),
- external trigger switch input,
- external display for in-vehicle use available,
- PPS output for device synchronization.



Image 18: DS-VGPS-HS

#### • DS-CLOCK

- synchronization box with GNSS receiver
- 10 Hz position update rate, SBAS augmentation supported,
- internal clock can be driven either by different IRIG time signal or by the internal GNSS receiver clock,
- generates IRIG B-DC signals for synchronization.

#### • DS-IMU1

- GNSS supported inertial measurement platform which measures orientation, position, velocities and accelerations,
- SBAS and DGNSS augmentation supported,
- PPS output for device synchronization.



Image 19: DS-IMU1

#### • DS-IMU2

- GNSS supported inertial measurement platform which measures orientation, position, velocities and accelerations,
- dual frequency GNSS receiver,
- RTK (1 cm position accuracy), DGNSS, SBAS augmentation supported,
- dual GNSS antenna measurement for accurate static heading output,
- PPS output for device synchronization.



Image 20: DS-IMU2

#### • GNSS receiver in SBOX and MINITAUR.

- <u>SBOX</u> and <u>MINITAURs</u> devices can be equipped with different GNSS receivers:
- 10 Hz NVS GPS/GLONASS or
- 20/100 Hz L1,L2 GPS/GLONASS Topcon receiver (supports also RTK and other augmentation systems).



Image 21: SBOXfe computer with internal GNSS receiver


## Supported 3rd party GNSS devices in <u>Dewesoft X</u>

- Every NMEA compatible GNSS device,
- Topcon GNSS,
- Novatel GNSS,
- Racelogic V-BOX,
- Microsat,
- Dewetron V-GPS.

[Video available in the online version]

## Timing and Synchronization with GNSS receiver clock

GNSS receiver can also be used as a precise timing source for instrument synchronization. Most of the receivers have an option of PPS output, some can also generate IRIG timecodes.

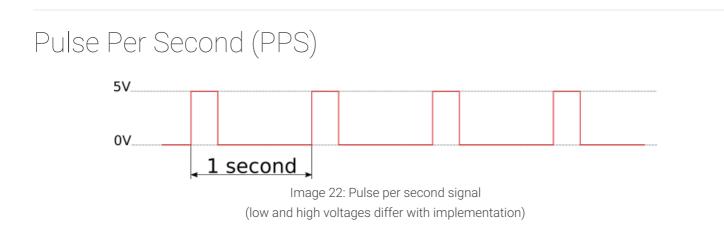

Pulse per second is an electrical signal that consists of pulses that are less than one second long but are accurately repeated once every second. The *devices adjust their clocks according to the PPS second*. PPS signals have different accuracy depending on their implementation. PPS timing accuracy on commercial GNSS receivers is around ±25 ns.

All of Dewesoft navigational instruments have **PPS output option**. With PPS signal we can directly synchronize Dewesoft USB devices: <u>DEWE-43</u> or <u>SIRIUS</u> USB. Dewesoft EtherCAT devices can be synchronized with ECAT Sync Junction which supports PPS input and can synchronize all of Dewesoft EtherCAT devices connected on the EtherCAT network.

### IRIG time code

**Inter-range instrumentation group** time codes are standardized formats for transfer of timing information. IRIG signals are structured as *data frames with absolute time information which are sent periodically at a specified rate*. There are six different IRIG time code formats designated with letters A, B, D, E, G and H. Each differ in the rate of data frame transmission. There are also three different ways for hardware implementation (different modulations) of IRIG time code signals.

From Dewesoft navigational instruments *DS-CLOCK can generate IRIG-B DC modulated time code* from it's internal GNSS receiver. DS-CLOCK has also the possibility to transform IRIG A, B and G DC or AC modulated time codes to IRIG-B DC modulated signal. IRIG-B DC time code input is directly supported by <u>DEWE-43</u>, <u>SIRIUS</u> and DS-NET devices for synchronization. It is also supported by ECAT Sync Junction for synchronization of Dewesoft EtherCAT devices.

### GNSS device settings in Dewesoft X

To use GNSS devices with <u>Dewesoft X</u> they have to be added to Dewesoft devices setup. The procedure differs depending on the device.

# DS-VGPS-HSC and DS-CLOCK

Both devices feature Dewesoft USB interface which enables <u>Dewesoft X</u> to automatically recognize the connected device. If detection wasn't successful it can be manually performed in <u>Dewesoft X</u> Settings.

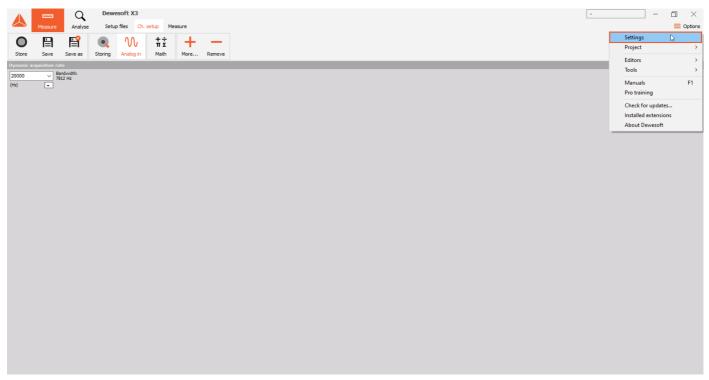


Image 23: Entering Dewesoft settings

If the unit isn't listed in Devices menu the device recognition can be performed with a click on the Refresh button.

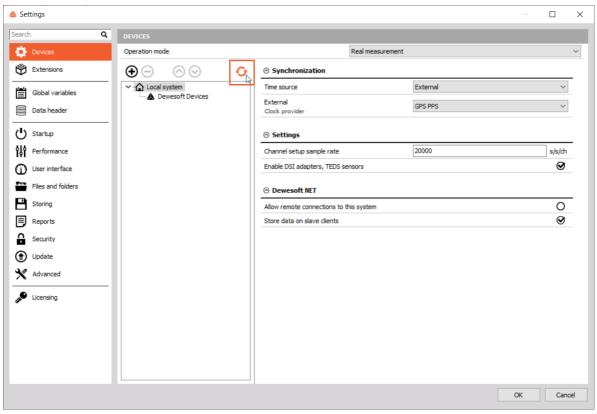


Image 24: Refresh button triggers a scan of the devices connected to the system

Device settings can be accessed by clicking on the device in device list.

| 🔺 Settings        |                  |                                 |            |          | ×      |
|-------------------|------------------|---------------------------------|------------|----------|--------|
| Search C          | DEVICES          |                                 |            |          |        |
| Devices           | Operation mode   | Real me                         | easurement |          | $\sim$ |
| Extensions        |                  | DS-CLOCKv2<br>⊙ Info            |            |          |        |
| -                 | DEWESoft Devices | Device name                     | DS-CLOCKv2 |          | 7      |
| Data header       | _                | Serial number                   |            | D0304378 |        |
| U Startup         |                  | Hardware version                |            | 1.5      |        |
| Performance       |                  | Firmware version                |            | 5.0.6.16 |        |
| User interface    |                  | ⊙ GPS settings                  |            |          |        |
| Files and folders |                  | GPS receiver model              |            |          | _      |
| Storing           |                  | CSM24                           |            |          |        |
| Reports           |                  | GPS receiver serial number<br>E |            |          |        |
| Security          |                  | Update rate                     | 10         | $\sim$ 1 | Hz     |
| (D) Update        |                  |                                 |            |          |        |
| Advanced          |                  |                                 |            |          |        |
| Licensing         |                  |                                 |            |          |        |
|                   |                  |                                 |            |          |        |
|                   |                  |                                 |            |          |        |
|                   |                  |                                 |            |          |        |
|                   |                  |                                 |            |          |        |
|                   |                  |                                 |            |          |        |
|                   |                  |                                 |            | OK Cance | el     |

Image 25: DS-CLOCKv2 device settings

Receivers inside **SBOX** or **MINITAUR** and **DS-VGPS-HS** are connected to the computer through RS232 interface. They can be added inside <u>Dewesoft X</u> device settings by clicking the Add button.

| 🔺 Settings               |                                   |                                 |                  |          |    |        | ×      |
|--------------------------|-----------------------------------|---------------------------------|------------------|----------|----|--------|--------|
| Search Q                 | DEVICES                           |                                 |                  |          |    |        |        |
| Devices                  | Operation mode                    |                                 | Real measurement |          |    |        | $\sim$ |
| Extensions               | <b>⊕</b> ⊘⊘ <b>⊖</b>              | Synchronization                 |                  |          |    |        | .      |
| Global variables         | Local system     Dewesoft Devices | Time source                     |                  | External |    | ~      |        |
| Data header              | Devesore Devices                  | External<br>Clock provider      |                  | GPS PPS  |    | $\sim$ |        |
| ( <sup>1</sup> ) Startup |                                   | ⊗ Settings                      |                  |          |    |        |        |
| Performance              |                                   | Channel setup sample rate       |                  | 20000    |    | s/s/ch |        |
| User interface           |                                   | Enable DSI adapters, TEDS see   | nsors            |          |    | Ø      |        |
| Files and folders        |                                   | O Dewesoft NET                  |                  |          |    |        |        |
| Storing                  |                                   | Allow remote connections to the | nis system       |          |    | 0      |        |
| Reports                  |                                   | Store data on slave dients      |                  |          |    | Ø      |        |
| Security                 |                                   |                                 |                  |          |    |        |        |
| Update                   |                                   |                                 |                  |          |    |        |        |
| X Advanced               |                                   |                                 |                  |          |    |        |        |
| Licensing                |                                   |                                 |                  |          |    |        |        |
|                          |                                   |                                 |                  |          |    |        |        |
|                          |                                   |                                 |                  |          |    |        |        |
|                          |                                   |                                 |                  |          |    |        |        |
|                          |                                   |                                 |                  |          |    |        |        |
|                          |                                   |                                 |                  |          | ОК | Cano   | el     |

Image 26: Add button in device settings

Add device menu opens. Select Dewesoft RS232 (Topcon/Javad/NVS) option.

| 🔺 Add device                        | ×        |
|-------------------------------------|----------|
| Standard devices Legacy devices     |          |
| ⊙ Camera                            | ·        |
| DirectX                             | ÷        |
| GigE                                | $\odot$  |
| Telemetry                           | $\odot$  |
| ⊗ CAN                               |          |
| Test CAN (replay mode)              | ÷        |
| Virtual CAN                         | $\odot$  |
| ⊙ Dewesoft NET                      |          |
| Measurement unit                    | $\odot$  |
| ⊖ GPS                               |          |
| Dewesoft RS232 (Topcon/Javad/NVS) 🔓 | $\oplus$ |
| GPS replay                          | ÷        |
| NMEA compatible GPS                 | $\oplus$ |
| Virtual GPS                         | $\odot$  |
| A Physic                            |          |

Image 27: Add device menu, Dewesoft RS232(Topcon/Javad/NVS)

<u>Dewesoft X</u> adds the device to the current system configuration and automatically scans for GNSS receivers connected to the computer. After a successful scan, receiver settings appear in a device settings. Settings differ depending on a receiver type and it's configuration options.

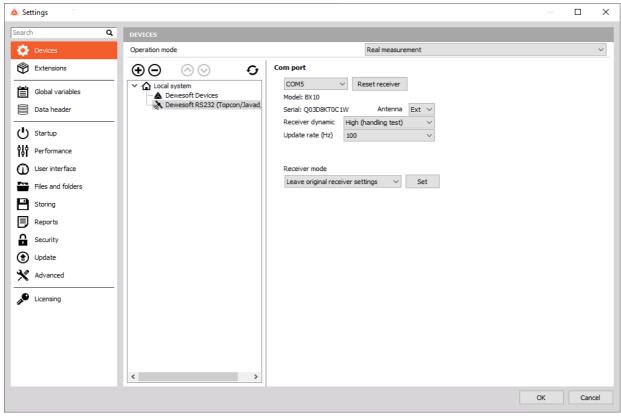


Image 28: Dewesoft RS232 GNSS device settings (Topcon BX10 GNSS Receiver)

# DS-IMU1 and DS-IMU2

Both GNSS supported inertial navigation units are supported in <u>Dewesoft X</u> through DS\_IMU plugin. Their setup and use isn't covered by this course due to the additional information that is needed to set up units. All of the information can be found in <u>DS\_IMU\_GYRO\_manual</u>.

# NMEA compatible GNSS receivers

<u>Dewesoft X</u> supports any GNSS receiver that sends NMEA messages through USB COM port. To add NMEA compatible GNSS receiver to current device configuration the NMEA compatible GPS has to be added in Add device menu.

| 🔺 Add device                      | ×                                |
|-----------------------------------|----------------------------------|
| Standard devices Legacy devices   |                                  |
| ⊘ Camera                          | ^                                |
| DirectX                           | Ð                                |
| GigE                              | <ul> <li>⊕</li> <li>⊕</li> </ul> |
| Telemetry                         | ÷                                |
|                                   |                                  |
| ⊗ CAN                             |                                  |
| Test CAN (replay mode)            | $\odot$                          |
| Virtual CAN                       | Ð                                |
|                                   |                                  |
| ⊘ Dewesoft NET                    |                                  |
| Measurement unit                  | $\odot$                          |
| ○ GP5                             |                                  |
| Dewesoft RS232 (Topcon/Javad/NVS) | •                                |
| GPS replay                        |                                  |
| NMEA compatible GPS               | ÷                                |
| Virtual GPS                       | Ð                                |
|                                   |                                  |
|                                   | ~                                |

Image 29: Add device menu, NMEA compatible GPS

Similar to Dewesoft RS232 GNSS receiver the NMEA receiver is added to current device configuration. If the device cannot be found there is a possibility that the selected COM port isn't the correct one. Auto search can be performed on different COM ports to find the connected GNSS receiver. COM port number with receiver the receiver connected can be found in Windows Device Manager.

| \land Settings       |   |                                      |                  |    | - 1 |       | × |
|----------------------|---|--------------------------------------|------------------|----|-----|-------|---|
| Search Q             | DEVICES   |                                      |                  |    |     |       |   |
| Devices              | Operation mode  |                                      | Real measurement |    |     |       | ~ |
| Extensions           | $\mathbf{O} \otimes \mathbf{O} \mathbf{O}$                        | Com port<br>COM3                     |                  |    |     |       |   |
| Global variables     | SBOX System (Local )     DEWESoft Devices     NMEA compatible GPS | Baud rate<br>115200                  | Auto search      |    |     |       |   |
| Data header          |   | Flow control                         |                  |    |     |       |   |
| Image: Performance   |   | Send init string                     |                  |    |     |       |   |
| User interface       |   | GPS found<br>Tracking on COM3, 11520 | 00 bps           |    |     |       |   |
| Files and folders    |   | Messages received:<br>GGA, GSA, VTG  |                  |    |     |       |   |
| Storing              |   |                                      |                  |    |     |       |   |
| Reports     Security |   |                                      |                  |    |     |       |   |
| Update               |   |                                      |                  |    |     |       |   |
| Advanced             |   |                                      |                  |    |     |       |   |
| Licensing            |   |                                      |                  |    |     |       |   |
|                      |   |                                      |                  |    |     |       |   |
|                      |   |                                      |                  |    |     |       |   |
|                      |   |                                      |                  |    |     |       |   |
|                      |   | 1                                    |                  | ОК |     | Cance | ! |

Image 30: Connected NMEA compatible GNSS receiver

### Legacy devices

To add a Legacy device select the Legacy devices menu in Add device window.

| <ul> <li>○ CAN</li> <li>Vector</li> <li>③ GPS</li> <li>Dewetron V-GPS</li> <li>(●)</li> <li>Leane V-SAT/Novatel</li> <li>(●)</li> <li>Microsat</li> <li>(●)</li> </ul> | 🕭 Add device                    |          |
|--|---------------------------------|----------|
| <ul> <li>○ GPS</li> <li>Dewetron V-GPS</li> <li>Leane V-SAT/Novatel</li> <li>✓</li> <li>Microsat</li> <li>✓</li> </ul>   | Standard devices Legacy devices |          |
| <ul> <li>○ GPS</li> <li>Dewetron V-GPS</li> <li>Leane V-SAT/Novatel</li> <li>✓</li> <li>Microsat</li> <li>✓</li> </ul>   | ⊗ CAN                           |          |
| Dewetron V-GPS   Leane V-SAT/Novatel  Microsat   | Vector                          | $\odot$  |
| Leane V-SAT/Novatel   Microsat   | ⊙ GPS                           |          |
| Microsat 🕒   | Dewetron V-GPS                  | Ð        |
|  | Leane V-SAT/Novatel             | $\oplus$ |
|  | Microsat                        | $\odot$  |
|  | Racelogic VBOX                  | $\odot$  |
|  |                                 |          |
|  |                                 |          |
|  |                                 |          |
|  |                                 |          |
|  |                                 |          |
|  |                                 |          |
|  |                                 |          |
|  |                                 |          |
|  |                                 |          |

Image 31: Adding a legacy device in Dewesoft X

### Channel setup and Measure

First it is needed to make a quick Channel setup where the GPS channels you need can be defined and enabled for a measurement, secondly to create a proper display with data you want to see and then the measurement is ready to start.

## Channel setup

Once a GNSS device is added to the list of devices a new GNSS screen appears in <u>Dewesoft X</u> channel setup.

| Save Save as Stor       |        | <b>UU</b> , | 01000<br>CAN | 1 🗡             | <b>π</b> Σ → →<br>Math More Remove |                |      |       |  |  |
|-------------------------|--------|-------------|--------------|-----------------|------------------------------------|----------------|------|-------|--|--|
| PPS sync                | Search |             |              | Q               |                                    |                |      |       |  |  |
| Standalone              | ID     | Used        | C.           | Name            | Description                        | Value          | Unit | Setup |  |  |
| 65                      | 1      | Used        |              | Longitude       | -                                  | 15°16,508' E   | 1    | Setup |  |  |
| 72                      | 2      | Used        |              | Latitude        | -                                  | 46°14,739' N   | 1    | Setup |  |  |
| 3073                    | 3      | Used        |              | Z               | -                                  | 261.98         | m    | Setup |  |  |
| 😳 🧴 🤨 🔰                 | 4      | Used        |              | Velocity        | -                                  | 0              | km/h | Setup |  |  |
| 32 🖉 🖉                  | 5      | Used        |              | Direction       | -                                  | 0              | deg. | Setup |  |  |
|                         | 6      | Used        |              | Distance        | -                                  | 0.0            | m    | Setup |  |  |
| 8                       | 7      | Used        |              | Used satellites | -                                  | 8              | -    | Setup |  |  |
| Show NMEA log           | 8      | Used        |              | Current sec     | -                                  | 12:47:22,8     | -    | Setup |  |  |
| Reset distance on start | 9      | Used        |              | Mark input      | -                                  | 0              | -    | Setup |  |  |
| Standstill detection    | 10     | Used        | _            | Acceleration    | -                                  | 0              | m/s2 | Setup |  |  |
| Velocity 0.5 km/h       | 11     | Used        |              | GPS fix quality | -                                  | Standalone     | -    | Setup |  |  |
| Min. time 0.5 s         | 12     | Used        |              | NMEALog         | -                                  | \$GNRMC, 12472 |      | Setup |  |  |
|                         |        |             |              |                 |                                    |                |      |       |  |  |

GPS screen in Channel setup consists of:

- GNSS channel list: all of the channels available on the connected GNSS receiver,
- Status indicators:
  - synchronization indicator screen: turns green if PPS synchronization signal is received by Dewesoft X,
  - *GNSS fix status indicator:* shows GNSS solution type. On the image 32 the GNSS receiver is in standalone mode and colored in grey. Indicator turns green when status is RTK fixed.
- **Satellites in view** displays the satellites that are detected by the GNSS receiver. Satellites that are used in position calculation are designated as Used and colored according to their constellation (GPS green, GLONASS red). Satellites that are visible but are not used will be in position calculation colored in white.

### Measure mode

displays, etc. **Map display** displays GNSS data and visualizes the path that was done by the receiver as it is shown on Image 33. Map display in also fully modifiable in a Design mode, where it **can be previewed in** *2D*, *3D or Terrain view*, which you can select under Map display settings - click on the display and settings will be shown in the left window (see the Image 33).



Image 33: GPS screen in Dewesoft measure mode

If you have included synchronization, you will be able also to see the current time displayed in the measure mode on the top of the screen beside computer resources status - see the Image 33. Synchronization is then successful when the circle will change its color in green and time will be written in black. If synchronization is lost or if there is a drift in synchronization signal, the displayed light and the numbers will turn to red. Large changes in synchronization signal time during the data acquisition can trigger a creation of a new data file that will be synchronized according to the new synchronization signal. This could happen after long periods without GNSS fix.